



Motor
Treiber
links:
Solar+
M1.1
M1.2
M2.1
M2.2
n.b.
Solar-

Motor
Treiber
rechts:
+5V
8
6
9
5
+5V
GND

+5V
4
2
GND

GND
+5V
A7
A6
A5
A4
A3
A2
A1
A0
+5V

M1

GND +5V

Orange: Schalter -> Vin+

LiPo - -> B-

GND 3 7 +5V

Vin- -> Out-

M2

Schalter

LiPo +